


Spare parts list
Flair 600 and Flair 1600

Edition 030331

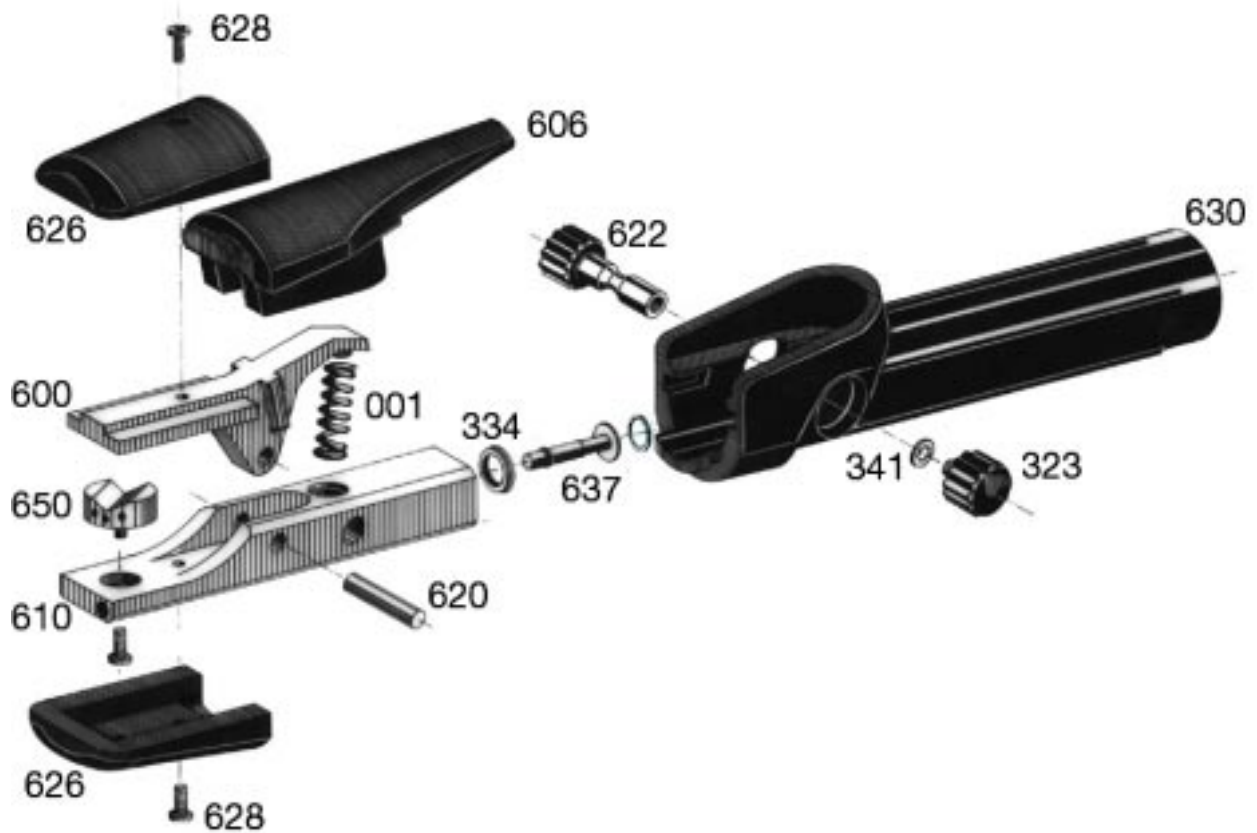

Item	Flair 600 ordering no.	Flair 1600 ordering no.	Denomination
628	0468 253 001	0468 253 001	Screw
626	0468 253 002	0468 253 002	Set insulation caps
600	0468 253 003	0468 253 023	Brass lever
650	0160 580 001	0468 253 024	Injection nozzle
610	0468 253 005	0468 253 025	Body
606	0468 253 006	0468 253 006	Lever insulation
001	0468 253 007	0468 253 027	Spring
620	0468 253 008	0468 253 008	Hinge pin
334	0468 253 009	0468 253 009	Valve seat
637	0468 253 010	0468 253 010	Valve
323	0468 253 011	0468 253 011	Push button
341	0468 253 012	0468 253 012	Safety ring
630	0468 253 013	0468 253 033	Handle
622	0468 253 014	0468 253 014	Push button + link